

TENT CARE TIPS

TENT CARE TIPS: BEFORE YOU CAMP, SET UP THE TENT AT HOME TO BECOME FAMILIAR WITH THE PARTS AND PROCEDURE OF SETTING UP YOUR TENT.

PITCHING YOUR TENT: FOLLOW INSTRUCTIONS. A GROUND CLOTH UNDER THE TENT PREVENTS FLOOR FROM FEELING DAMP AND PROTECTS THE TENT FLOOR FROM SHARP OBJECTS. THE GROUND CLOTH SIZE SHOULD BE SLIGHTLY SMALLER THAN THE TENT FLOOR. SPREAD A COVER UP ON THE TENT FLOOR TO COLLECT DIRT AND FURTHER PROTECT THE TENT FLOOR.

STAKING OUT: DRIVE TENT STAKES SECURELY BUT NOT TOO DEEPLY. DO NOT STRETCH THE FLOOR SO TIGHTLY THAT TEARS MAY TAKE PLACE. IN HIGH WINDS, MAKE CERTAIN GUY ROPES ARE SECURE AND ALL STORM FLAPS ARE CLOSED. KEEP EXTRA STAKES AND ROPES HANDY IN AN EMERGENCY.

MILDEW: MILDEW IS A PARASITIC GROWTH ASSOCIATED WITH DAMPNES AND CAN DRASTICALLY REDUCE THE LIFE OF YOUR TENT. NO FABRIC IS MILDEW-PROOF. SYMPTOMS OF MILDEW ARE DISCOLORATION AND MUSTY SMELLS. TO AVOID THIS CONDITION, MAKE CERTAIN YOUR TENT IS COMPLETELY DRY BEFORE FOLDING AND STORING. AIR YOUR TENT DAILY WITH THE WINDOWS AND DOORS OPEN WHEN CAMPING. WHEN STORED, ROLL LOOSELY AND OFF A CONCRETE FLOOR WITH FRESH AIR AVAILABLE. BE SURE TO STORE YOUR TENT IN A DRY LOCATION.

NYLON CARE: NYLON MATERIAL HAS A TENDENCY TO STRETCH AND SHIFT UNDER STRESS. DURING A HEAVY RAIN, IT MAY BECOME NECESSARY TO TIGHTEN GUY ROPES TO PREVENT POCKETING WATER AND CAUSE A BAG IN THE NYLON. DO NOT TIGHTEN ROPES TOO TIGHTLY AS TO TEAR THE FABRIC OR OPEN SEWN SEAMS. DO NOT LEAVE YOUR TENT SETUP EXPOSED TO BRIGHT SUNSHINE FOR PROLONGED PERIODS OF TIME. SUNLIGHT IS VERY HARMFUL TO MOST SYNTHETIC FABRICS.

STRIKING YOUR TENT: IF POSSIBLE, TAKE DOWN IN MID-DAY TO ASSURE THE TENT IS DRY. IF THIS IS IMPOSSIBLE, MAKE CERTAIN THAT YOUR TENT IS COMPLETELY DRY BEFORE STORING THE TENT FOR ANY LENGTH OF TIME. DURING A CAMP TRIP, BRUSH OFF ANY DIRT OR GRASS. INSPECT OCCASIONALLY TO SEE IF ANY PARTS ARE MISSING. IF ANY REPAIRS ARE NECESSARY, MANY LOCAL CANVAS AND UPHOLSTERY SHOPS CAN SEW NECESSARY REPAIRS. WHEN DEPARTING YOUR CAMP SITE, MAKE CERTAIN NOTHING IS LEFT AND ALL CAMP FIRES ARE COMPLETELY OUT.

REPLACEMENT PARTS: SPARE PARTS MAY BE ORDERED FROM WWW.CATOMAOUTDOOR.COM OR BY CALLING 1-800-826-2526. FOR PRICING AND ORDERING INSTRUCTIONS, SPECIFY TENT MODEL, TENT NAME, FRAME PART NUMBER AND QUANTITY NEEDED. IN NO CASE WILL WE ACCEPT THE RETURN OF ANY TENT SHOWING SIGNS OF ABUSE OR MISUSE. MATERIALS AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

WARNING

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC!

THIS TENT IS MADE WITH FLAME RESISTANT FABRICS, WHICH MEET CPAI-84 SPECIFICATIONS. IT IS NOT FIRE PROOF! THE FABRIC WILL BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME SOURCE.

THE APPLICATION OF ANY FOREIGN SUBSTANCE TO THE TENT FABRIC MAY RENDER THE FLAME RESISTANCE PROPERTIES INEFFECTIVE. KEEP TENT AWAY FROM INSECT REPELLENTS.

LIMITED WARRANTY

CATOMA PRODUCTS, CO. WARRANTS TO THE ORIGINAL PURCHASER THAT OUR PRODUCTS ARE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP FOR THE LIFE OF THE TENT. IF DEFECTS IN MATERIAL OR WORKMANSHIP SHOULD OCCUR, PLEASE CONTACT OUR WARRANTY CENTER: CATOMA PRODUCTS, P.O. BOX 241367, MONTGOMERY, AL 36124-1367. FOR PARTS, CONTACT CATOMA DIRECTLY. NO MERCHANDISE RETURNS WILL BE ACCEPTED FOR ANY REASON, UNLESS ADVANCE AUTHORIZATION IS RECEIVED FROM CATOMA. ALL RETURNS MUST BE PREPAID. COLLECT SHIPMENTS WILL BE REFUSED. IF DEFECTS OF MATERIAL AND/OR WORKMANSHIP ARE CONFIRMED, FREIGHT CHARGES WILL BE PROMPTLY REIMBURSED UPON PRESENTATION OF A PAID FREIGHT RECEIPT.


NO DEALER IS AUTHORIZED TO MAKE ANY REPLACEMENT OR ADJUSTMENT ON BEHALF OF THE FACTORY. CATOMA IS NOT RESPONSIBLE FOR NORMAL WEAR AND TEAR OR DEFECTS CAUSED BY ACCIDENT, ABUSE, ALTERATION, MISUSE OR IMPROPER CARE. ALSO, NOTE THAT PROLONGED SUN EXPOSURE WILL DETERIORATE THE SYNTHETIC FABRIC, OVER WHICH WE HAVE NO CONTROL. IN NO EVENT WILL CATOMA PRODUCTS CO. OR LEISURE LIFE (USA), INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATION OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.




CATOMA
P.O. BOX 241367 • MONTGOMERY, AL 36124-1367
PH: 800-826-2526 • FAX: 800-205-9661
WWW.CATOMAOUTDOOR.COM

Catoma

SPEEDOME TENT SET-UP INSTRUCTIONS

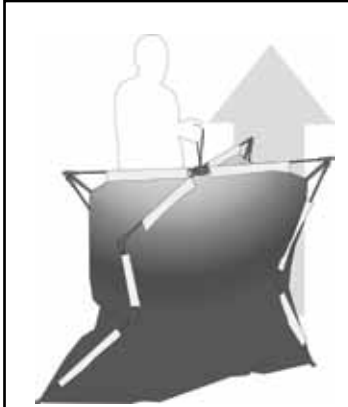


1. Remove tent from carrying bag. Separate tent from fly and stakes. (Note: Poles are integral to tent. No need to join poles and thread through pole sleeves).

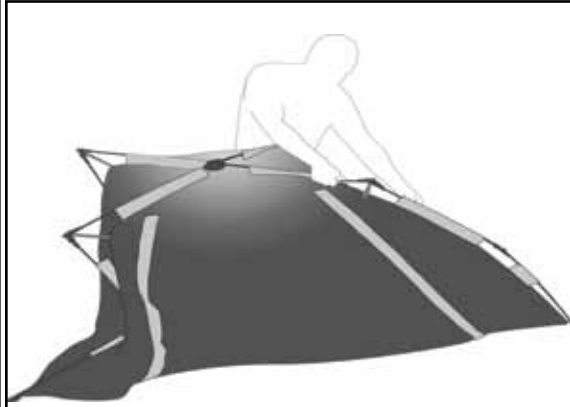

2. Allow poles to hinge down and grasp the lanyard at the top peak of tent, lifting the tent assembly at the same time.




3. Shake tent gently to allow all poles to hang down. Start locking the first pole into position. While firmly holding the upper section of that pole, lift the middle section of same pole to lock the upper metal ferrule in place. The lower hinged ferrule will automatically lock into place.

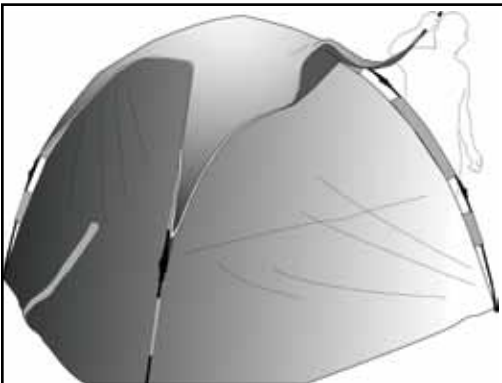

4. If your tent includes a fly (2 Up or Switchback), take the fly out of the bag and place over the top of the tent. The taped seams should face the tent.




5. Begin to attach the cord clips by pulling them down past the first Speedome hinge and clip them into place.

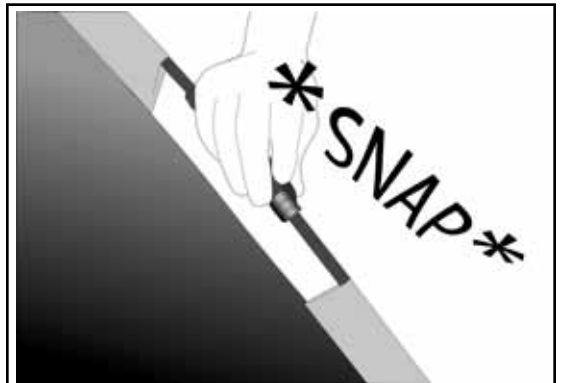


6. Follow the same procedure for all four pole clips and the fly is ready to use.

If you have a Switchback, your tent includes extended vestibule space.

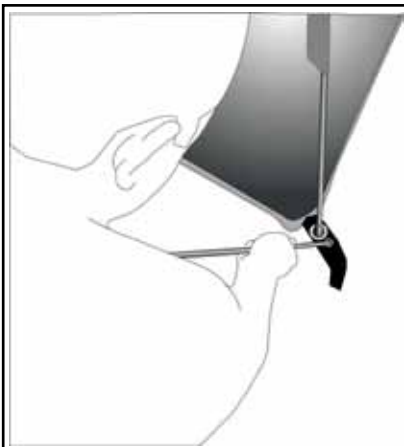

7. Take out aluminum shock-corded pole and attach the sections of the pole together. They will lock into place. Attach the pole ends into the grommets on the straps extending from the front two corners of the tent.

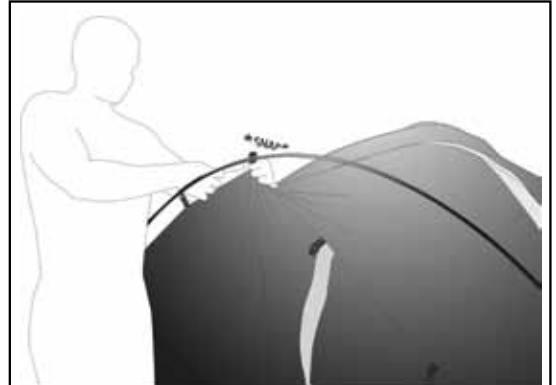

8. Place all the pole clips into place along the pole. Pull out the front of the vestibule and stake into place.